INSTALLATION MANUAL



LANDSCAPE ACCENT SPOTLIGHT 6W 24V IP66

Item number: ZL-SP/6W2724V12O | ZL-SP/6W2724V12OH | ZL-SP/6W2724V30O | ZL-SP/6W2724V30OH | ZL-SP/6W2724V60OH













OPERATING INSTRUCTIONS

For safety reasons, do not open or modify this product in any way. Doing so will void the warranty.

Only use with correct voltage supply as marked on individual product boxes.

Before maintenance or replacing, turn off power and let the luminaire cool to avoid electric shock or burn.

Risk group 1. Do not stare at the operating light source.

Replace any cracked shields.

Dispose of all products in accordance with disposal laws in your area (not suitable for general waste).

The luminaire is not intended for use with emergency exit fixtures or as emergency light.

Our products as well as the technologies behind them are subject to continuous improvements. All specification is subject to change without notice. Please refer to our website for the most up to date information.


ATTACHING THE SPIKE




1. Using a hex screwdriver or an Allen Key unscrew the base of the luminaire until it can be removed completely.



2. Align the spike and attach to the luminaire using the same screw.

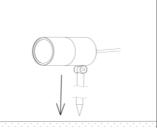

3. Position the spike firmly into the ground, taking care to avoid any underground pipes and wiring.

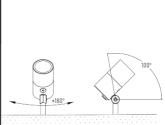

4. Adjust direction of light to get the best effect.

To change the vertical angle, loosen the connector, adjust the luminaire and tighten back.

All information in this manual is presented in good faith. Zico Lighting assumes no responsibility for incorrect installations due to failure to follow the manual or misinterpretations. The photographs and drawing are for indicative purposes only.

INSTALLATION MANUAL



LANDSCAPE ACCENT SPOTLIGHT 6W 24V IP66

INSTALLATION


The safety and functionality of this luminaire is only guaranteed in the instance of correct installation. Please keep this manual for future reference.

Installation and maintenance must be carried out by a qualified electrician. Always refer to the electrical data on the luminaire label.

A leader cable with waterproof connector must be used to connect the luminaire to the power supply. NB! Removing the waterproof connector on the luminaire cable will invalidate the warranty.

The LED light source is not replaceable.

The luminaire should NOT be installed in closed environment or covered by other objects.

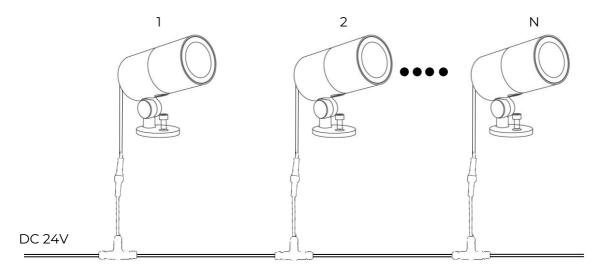

- 1. Waterproof junction boxes / T-connectors are required to connect to power source.
- 2. The individual luminaires must be connected in parallel.
- 3. Connect the luminaire to the Leader Cable (sold separately). Adjust the leader cable to the required length, then use the diagram for wiring. NB! Removing the waterproof connector on the luminaire cable will invalidate the warranty.



All information in this manual is presented in good faith. Zico Lighting assumes no responsibility for incorrect installations due to failure to follow the manual or misinterpretations. The photographs and drawing are for indicative purposes only.